


RPP04 Mobile Label Printer

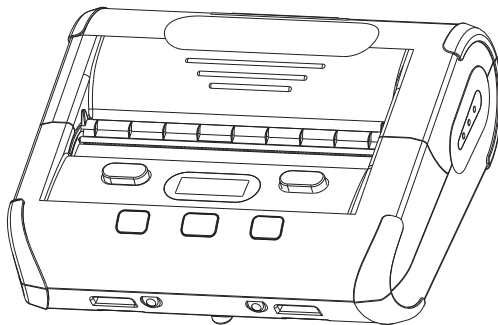

Please read this Manual carefully before using the printer and keep it for future reference

Contents

Preface.....	1	V. Setting.....	12
About This Manual.....	1	5.1 Enter Setting Screen.....	12
Icons and Practices.....	1	5.2 Self-test.....	14
Related Manual Information.....	1	5.3 Paper Stripping Function.....	15
Safety Instruction.....	2	VI. Icon Description.....	16
I. Standard Configuration.....	5	VII. Communication.....	17
II. Appearance and Components.....	6	7.1 USB Communication.....	17
III. Preparation Before Use.....	8	7.2 WiFi Communication.....	18
3.1 Battery Installation.....	8	7.3 Bluetooth Communication.....	18
3.2 Battery Charging.....	9	VIII. Repair and Maintenance.....	19
3.3 Printing Paper Loading.....	10	8.1 Daily Maintenance of Printer.....	19
IV. Basic Functions.....	11	8.2 Use and Storage of Printing Paper.....	19
4.1 Power On.....	11	IX. Troubleshooting.....	20
4.2 Power Off.....	11	X. Appendix.....	21
4.3 FEED.....	11	10.1 Printer Parameters.....	21
4.4 Auto Learning of Paper Types.....	11	10.2 Battery Recycling.....	22
4.5 Auto Sleep/Wake.....	11		

Preface

About This Manual

Thank you for purchasing the mobile label printer produced by Rongta.


This manual can help you easily learn to use this product. Please read this Manual carefully before using the printer and keep it properly so that everyone who uses this product can read it.

Icons and Practices

For your convenience, this Manual uses the following symbols (icons) and practices:

 **WARNING** warns that improper use may result in property damage, serious injury or death.

 **ATTENTION** indicates that improper use may result in personal injury or property damage.

 **NOTE** indicates that the information listed allows you to use the product better or extend the service life of the product.

Related Manual Information









Various manuals provide detailed instructions for various technical problems.





《RPP04 Product Specification》 provides detailed description for hardware/physical/technical parameters of this product.

 The illustrations and text used in this Manual may differ from the actual product.





Safety Instruction







Please follow the following precautions when using the printer:

-  **ATTENTION** Do not disassemble the printer by yourself. Please read this manual carefully before use.
-  **WARNING** Please turn off the power immediately in case of failure. When you notice smoke or odor coming from the printer or power adapter, please unplug the power adapter and remove the battery immediately. Please be careful not to get burnt.
-  **WARNING** Please do not use the printer near gas stations, fuel warehouses and other flammable materials.
-  **WARNING** During charging, the printer and power adapter must be placed in a ventilated place with the ambient temperature of 0°C - 45°C, and be sure to use the power adapter provided by the company. The use of unapproved power adapters may be hazardous and also violates our warranty policy.
-  **ATTENTION** When the printer is printing, please do not open the cover of the paper bin; otherwise, unpredictable conditions may occur and the printer may even be damaged.
-  **ATTENTION** After printing, the print head is still at a high temperature. Do not touch it to avoid burns.
-  **ATTENTION** Please do not use dissolved matter (such as benzene thinner) to wipe the printer shell, and please keep the printer away from corrosive chemicals. You can only gently wipe the printer with a clean soft cloth.
-  **ATTENTION** Please use our original or approved printing paper; otherwise, it may lead to poor printing quality or even damage to the printer mechanism.







-  **ATTENTION** If the printer is to be stored for a long time, be sure to remove the battery from the printer and store it separately; otherwise, the battery may fail or even have leakage, which may damage the printer.
-  **ATTENTION** Make sure the printer is turned off before replacing the battery. If a power adapter is used, make sure the power is cut off before replacing the battery.
-  **ATTENTION** The printer can work stably at an ambient temperature of 0°C - 40°C. Too high or too low ambient temperature will lead to low printing quality.
-  **ATTENTION** The time that the printed text can be kept on the thermal printing paper is related to the paper quality. To print documents that need to be kept for a long time, please use long-lasting thermal printing paper.

Please follow the following precautions when using the battery:

-  **ATTENTION** Please carefully read this manual and symbols on the battery surface before use.
-  **WARNING** Please charge the battery in a cool and ventilated room. The high ambient temperature during charging will cause the battery to heat up, emit smoke, burn, deform, or even explode.
-  **WARNING** There are special protective circuits and devices inside the battery. Please do not disassemble the battery by yourself, or it will cause a short circuit or electrolyte leakage.
-  **WARNING** There is a risk of blindness if the electrolyte gets into the eye. In case of eye contact, rinse immediately with water and seek doctor's advice immediately.

-  **WARNING** Do not squeeze, mechanically vibrate or shake the battery, and short circuit of the battery is strictly forbidden.
-  **WARNING** Please do not put the battery into water; otherwise, it may result in internal short circuit, which may cause the battery to heat up, emit smoke, deform, damage or even explode.
-  **ATTENTION** Do not expose the battery to direct sunlight or put it in a place with excessive smoke and dust. Do not use the battery in a high humidity environment, such as a bathroom.
-  **ATTENTION** Please replace the battery if it cannot meet the performance requirements.
-  **ATTENTION** Keep the battery out of reach of children to prevent danger.
-  **ATTENTION** If you notice any discoloration or deformation of the battery, stop using it immediately.


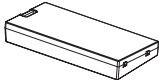
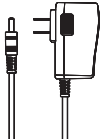

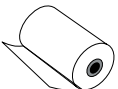

 
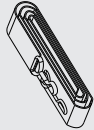
Please carefully read this Manual and symbols on the surface of power adapter before use.

-  **ATTENTION** Do not disassemble or modify the power adapter. Do not use the power adapter if the power line is damaged; otherwise, it may cause electric shock, fire and damage to the power adapter.
-  **WARNING** Do not touch the power adapter with wet hands. If the power adapter comes into contact with water or other liquids, cut off the power supply immediately.
-  **WARNING** Please avoid short circuit, vibration or shaking of the power adapter.
-  **WARNING** Do not use the power adapter in a high humidity environment, such as a bathroom. The equipment is not waterproof and must not be exposed to rain or moisture.
-  **WARNING** Hold the power adapter body when unplugging. Simply pulling the power line will damage the wires.
-  **ATTENTION** Keep the power adapter out of reach of children to prevent danger.

I. Standard Configuration




The pictures are for reference only. If any item is damaged or missing, please contact the supplier.


Standard accessories			
			
Printer (1 set)	Battery	Power charger	USB cable
Standard accessories			Optional accessories
			
Label paper (1 roll)	Warranty Card (1 pcs)	User's Manual (1 pcs)	Straps (1 pcs)

II. Appearance and Components ▶▶▶


□ Front View

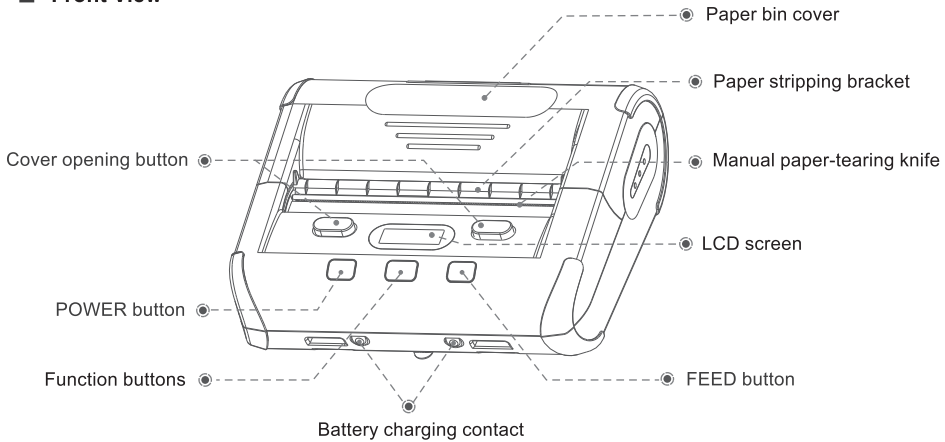

□ Inside View

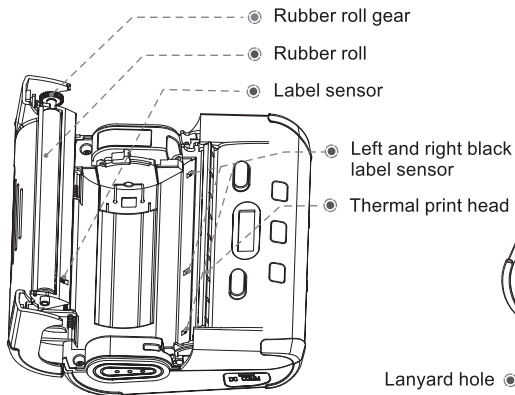


□ Rear View

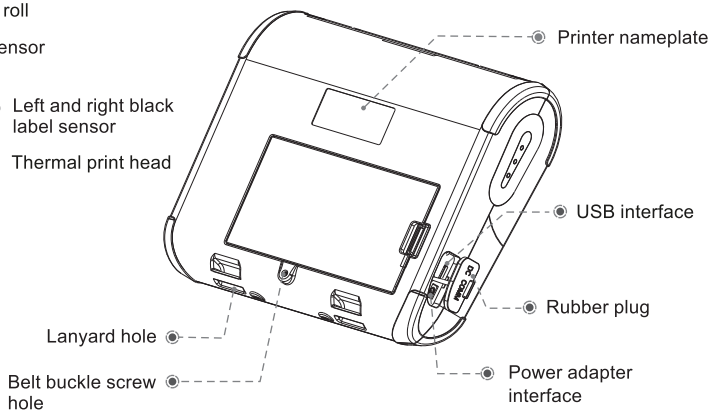

III. Preparation Before Use




This chapter describes the steps to prepare the printer, including battery installation, battery charging, and printing paper loading.

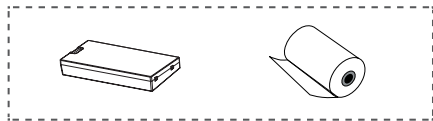

3.1 Battery Installation

The battery is installed in the printer before the product leaves factory.


- (1) Remove the protective film of battery contacts.
- (2) Install the battery as shown in the figure above.
- (3) Fasten the battery.

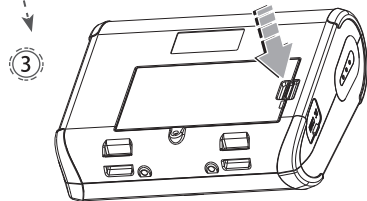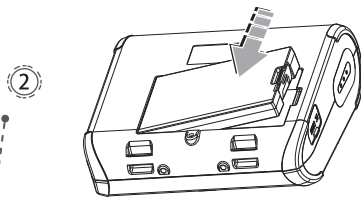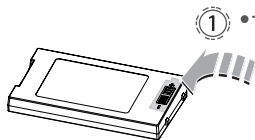

3.2 Battery Charging

1. Standby charging

Insert the power adapter plug into the power socket, and the DC plug into the printer charging port.

Charging: Battery indication icon  scroll display of battery indication slot

End of charging: Battery indication icon shows  full battery.

WARNING

If you use a power adapter not provided or approved by us, the printer may be damaged.


NOTE

You can print while charging.

The equipment supports fast charge function and can continue to print after short-time charging.

ATTENTION


Do not remove the battery while charging.

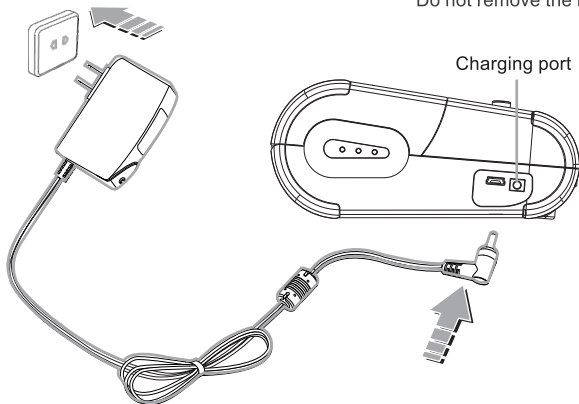

3.3 Printing Paper Loading

1. Remove the seal of the paper roll.
2. Press the cover opening button to open the paper bin cover.
3. Slide the stopper to adjust the size of paper bin and toggle the buckle to fix it.

4. Put the paper roll into the paper bin as shown in the figure.
5. Pull out a part of the paper along the exit and close the paper bin cover.

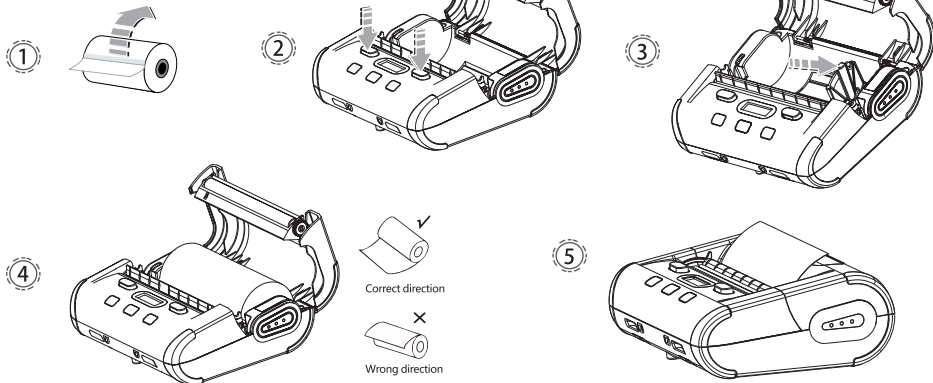

- ☺ **NOTE:** 1. Paper specification used by the printer: Paper width:110mm (One side can be adjusted) , paper roll diameter: 40mm.
2. Pay attention to the direction of paper roll. If it is placed in the wrong direction, it will lead to blank printing.

IV. Basic Functions




4.1 Power On

Press and hold the POWER button for 3 seconds to turn on the printer.

4.2 Power Off

During power-on state, press and hold the POWER button for 3 seconds to turn off the printer.

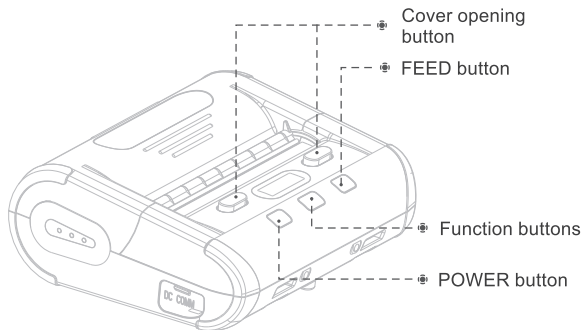

4.3 FEED

Under continuous feeding mode, touch the FEED button "⏏", under feeding 5mm, black label mode or label mode, touch the FEED button "⏏", Feed the paper to the outside of black label or the space between labels.

4.4 Auto Learning of Paper Types

Press and hold FEED button "⏏" for auto learning of paper types

4.5 Auto Sleep/Wake

Auto sleep

When the printer is turned on and has no button operation or data transmission within 10 seconds, it will automatically enter sleep mode. The screen display is shown in the figure.



Automatically wake up

When the printer is in sleep mode, it can be woke up by pressing the POWER button or when receiving data.

V. Setting



RPP04 has a multi-function LCD display, which can visually show the printer's connection status, power display, etc., and allow user to perform up to a dozen quick settings.

Can be set in printer setting screen:

1. Select language;
2. Set paper type (Label, Continuous, Black Label);
3. Set print speed;
4. Set screensaver time;
5. Whether to open the paper stripping mode;
6. Set according to the paper width.













5.1 Enter Setting Screen:

During power-on state (non-sleep mode), press and hold SET button to enter the option screen.

Press SET button: Go to the next option

Press FEED button: Change option parameters

Press POWER button: Confirm settings and exit

 ●○○○○○○○○○↕ Do: Print Info	print self-test page	Press Power button to start printing self-test page
 ●●○○○○○○○↕ Print Quality: 0-4	0-4	Set wide range definition (coarse tuning)
 ○●○○○○○○○↕ Darkness: 0-4	0-4	Set small range definition (fine tuning)
 ○○○●○○○○○↕ Speed: 0-4	0-4	Set print speed
 ○○○○○●○○○○↕ Language: English	EngLish	Set language
 ○○○○○●○○○○↕ Buzzer Set: Open	Open	Set whether to turn on the buzzer
 ○○○○○●○○○○↕ Paper Type: Label	Label	Set according to the paper type used
 ○○○○○○●○○○↕ Auto Shutdown: -	1-5H	Set auto shutdown
 ○○○○○○●○○○↕ Screen Saver: 10	10/15/30/40S	Set screensaver time
 ○○○○○○●○○○↕ Peel Set: Open	Open	Set whether to enable the paper stripping mode
 ○○○○○○●○○○↕ Cmd Model: TSC	TSC/ESC	Set command mode
 ○○○○○○●○○○↕ Paper Size: 104	104/80/58mm	Set according to the paper width

5.2 Self-test

The self-test page will list the model of printer, communication interface configuration, etc.

Product information

Selftest
Firmware Version:A43B1C2D0F0_V1.30 2019-07-04
Model:.....RPP04
Interface:.....USB
 & wifi
 & BlueTooth
Print Method:.....Direct Thermal
Print Density:.....9
Print Speed:..... 4
Font:.....24x24GB 18030 Kanji font
Media Type:..... Label
Instruction Set:..... TSC
Dpi:..... 203

Print size parameter

Size:.....0 mm , 0mm
Reference:.....0mm , 0mm
Shift:..... 0mm
Offset:..... 0mm

POWER & DEGREE


[POWER & DEGREE]
VOLTAGE:8.3 DEGREE:30

Bluetooth Configure



[Bluetooth Configure]
EDR NAME:.....RPP04-E
BLE NAME:.....RPP04-B
EDR PIN:.....0000
BLE PIN:.....000000
EDR ADD:.....00-00-15-01-B0-4C
BLE ADD:..... 00-01-15-01-B0-4C

WIFI Configure

[WIFI Configure]
WIFI SSID:.....12345678
Ethernet ID:.....41-38-30-31-35-37
DHCP:.....Disable
Ip address:.....192.168.1.87
Port:.....9100
NetMask:..... 255.255.255.0

 The display interface of Bluetooth version and WIFI version is slightly different, which shall be subject to the actual display.



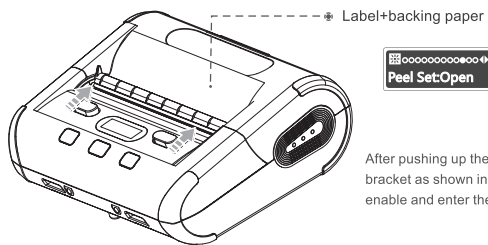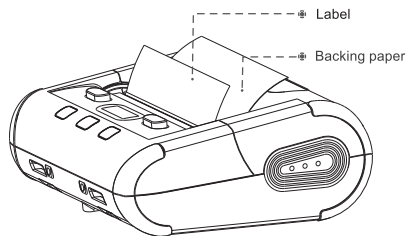


5.3 Paper Stripping Function



After pushing up the paper stripping bracket as shown in the figure, set to enable and enter the paper stripping mode.

VI. Icon description




Printing status		This icon is displayed when the printer is printing or feeding paper.
Paper shortage state	 Please fill printing papers	When paper shortage occurs or the paper roll is not properly loaded
Cover opening state	Please close paper tank cover	When the paper bin cover is not closed or not properly closed
Battery indication		When charging, the icon will scroll to indicate the charging status
Bluetooth indicator		The printer has Bluetooth function
WiFi indicator		The printer has WiFi function (✓: indicates successful WiFi connection)

VII. Communication



7.1 USB Communication

RPP04 provides Micro USB port, which is used to connect the printer to a PC as shown in the figure to charge the printer, set parameters, and transmit data, etc.

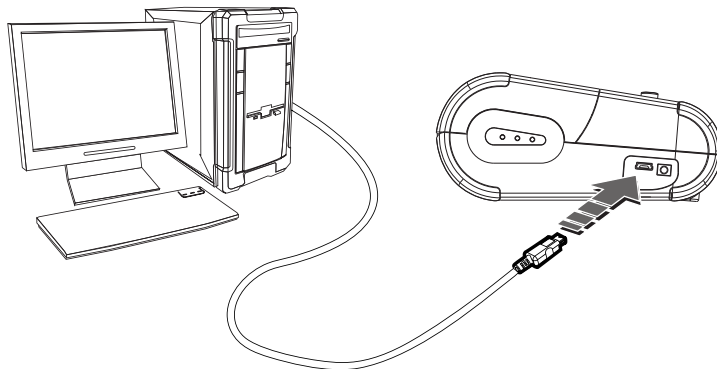

7.2 WiFi Communication

The RPP04 printer can provide WiFi communication, and support STA mode and TPIK/AES encryption. Its effective communication distance is no more than 20m.




 WiFi information can be changed through the setting tool. For details, please refer to the "Instruction Manual for Setting Tool".

7.3 Bluetooth Communication

- 1.The RPP04 printer can provide dual-mode Bluetooth 4.0 (SPP + BLE), which can communicate with Android system and IOS system terminals. Its effective communication distance is no more than 10m.
- 2.Support NFC fast Bluetooth pairing and connection
(mobile phone with NFC function and APP will automatically connect with the printer after a contact)



 The default pairing password of Bluetooth is 0000 and the parameters can be set through the setting tool. For details, please refer to the "Instruction Manual for Setting Tool".

VIII. Repair and Maintenance



8.1 Daily Maintenance of Printer

1. Cleaning of outside and paper bin: Wipe the surface of the printer and the inside of the paper bin gently with a wrung-out wet cloth. Make sure that the wet cloth is completely wrung out.
2. Cleaning of printer mechanism: The printer mechanism must be cleaned regularly, especially when the print quality declines. The cleaning method is as follows: Use absorbent cotton moistened with anhydrous alcohol to gently wipe the stains or the residue glue of label paper on the surface of the printer mechanism until it is clean.
3. If water is found inside the printer, Turn it off immediately, remove the battery, and dry the printer by airing.
4. If the printer will not be used for a long time, remove the battery and store it separately.

8.2 Use and Storage of Printing Paper

1. Please keep newly purchased printing paper in intact package and prevent it from direct sunlight and high temperature.
2. Please keep printed documents in a dark place at room temperature (about 20°C), so as to effectively extend the storage life of the documents.
3. If the documents need to be kept for a long time, please use long-lasting thermal printing paper.

IX. Troubleshooting



Fault Phenomenon	Cause	Solution	Refer to page
Paper is fed but no data is printed.	Printing paper is loaded in the wrong direction.	Please load the printing paper in the other direction.	10
Blurry printing	The printer is not cleaned for a long time and the printer mechanism is contaminated by dirt.	Clean the printer mechanism.	19
	Poor color rendering of printing paper	Please set higher blackness or use paper with better color rendering	12
Printed documents are blurred in months or even weeks	Poor quality of printing paper	Please use long-lasting thermal printing paper	19
	Documents are kept at high ambient temperature	Please keep the documents at room temperature (about 20°C)	19

X. Appendix



10.1 Printer Parameters

Printing Parameters	
Printing method	Thermal line printing
Print width	104mm
Paper roll diameter	≤50mm
Print speed	50mm/s
Paper stripping	Supported
Resolution	8 dots/mm (203dpi)
Built-in font	GB18030 Simplified Chinese (standard)
Service life of printer mechanism	50km (label paper) 150km (Continuous paper)
Command set	TSC/CPCL/ESC/POS
Print length	>200m
Print content	One-dimensional code: UPC-A, UPC-E, EAN-13, EAN-8, CODE39, ITF, CODEBAR, CODE93, CODE128 QR code: QRCODE

Printing Parameters	
Battery specification	7.4V 2000mAh rechargeable lithium ion battery
Charging time	6~8 hours
Wire communication	Standard USB2.0
Wireless communication	Dual-mode Bluetooth Bluetooth 4.0 (SPP+BLE) /WIFI
Dimensions	150mmx134mmx60mm
Weight	0.6kg
Working environment	Temperature: 0°C~45°C, humidity: 20%~90%
Storage environment	Temperature: -10°C~70°C, humidity: 10%~90%

10.2 Battery Recycling

This product uses a rechargeable lithium battery. To protect the environment, please do not dispose of used batteries at will. The supplier will provide you with battery recycling service.



Rongta Technology (Xiamen) Group Co., Ltd.

ADD: No. 889 Xinmin Avenue, Tongan District, Xiamen, China

WEB: www.rongtatech.com

TEL: 0086-592-5666129 FAX: 0086-592-5659169